

FIG. 1.

2/12

MAIN MENU

Set Up Channels

Parental Control

To set up Parental Control
you must first create
a Parental Password.
Press SELECT now to create
a password.

Select your channel order
and favorite channels.

FIG. 2A.

PARENTAL CONTROL

Unlock All Locks

Lock by Channel
Lock by Rating & Content
Lock by Time

Temporarily unlocks all the
locks you previously selected.

FIG. 2B.

LOCK BY CHANNEL

2	AMC	WWOR	BRAV
4	MEU	26	BET
5	20	CSP2	HSC
7	TNT	MAX	50
HBOE	NICK	CNBC	VISN
9	20	20	HBO
VC1	20	SHOW	VH12
20	20	REQ	MTV
VC2	22	DISN	6
32	USA	REQ2	NVO
VC2	22	DISN	PPV

Use ARROWS then SELECT to choose

KQED-PBS CH 9 MAY 23 8:17P

M
O
R
E

FIG. 2C.

LOCK BY RATING & CONTENT

RATING	CONTENT
G	Profanity
PG	Nudity
PG13	<input checked="" type="checkbox"/> Violence
R	Adult Situations
NC17	<input checked="" type="checkbox"/> Adult Themes
<input checked="" type="checkbox"/> X	<input checked="" type="checkbox"/> Adult Language
<input checked="" type="checkbox"/> NR	

Press SELECT to lock or unlock rating or content. Use ARROWS to move. Press EXIT when done.

60

FIG. 2D.

LOCK BY TIME

On - Off

Lock at:

Unlock at:

Lock Status:

Press to change time.
 Use to go to next item.
 Press EXIT when done.

62

FIG. 2E.

4/12

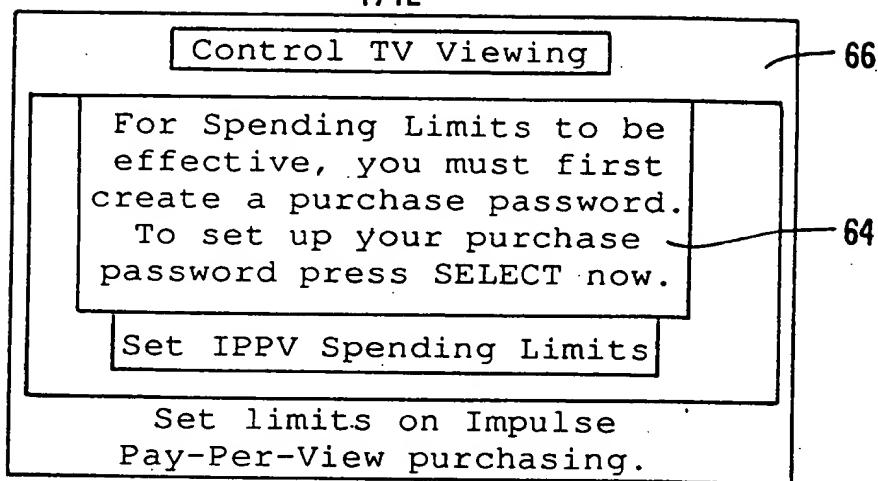


FIG. 2F.

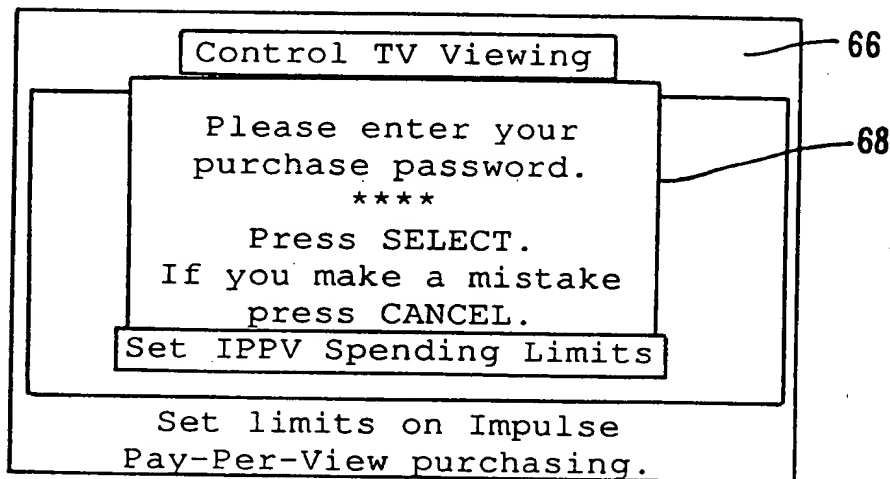


FIG. 2G.

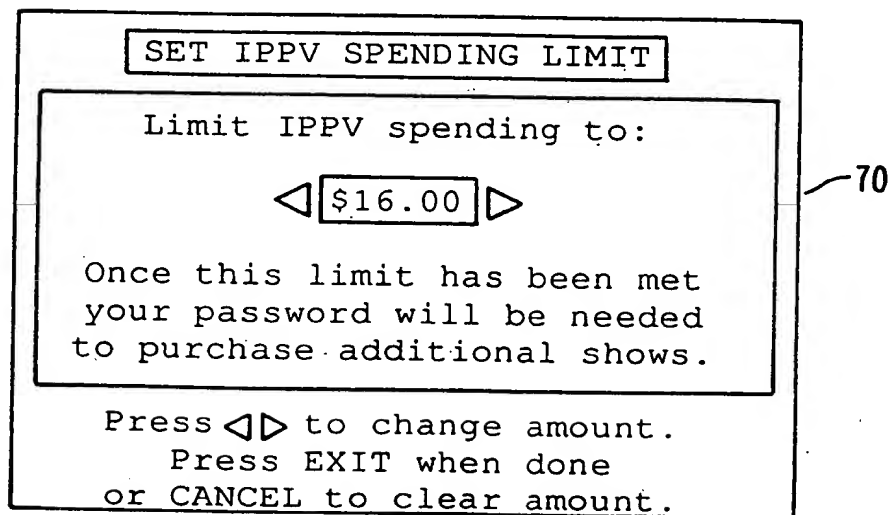


FIG. 2H.

003080" 62058960

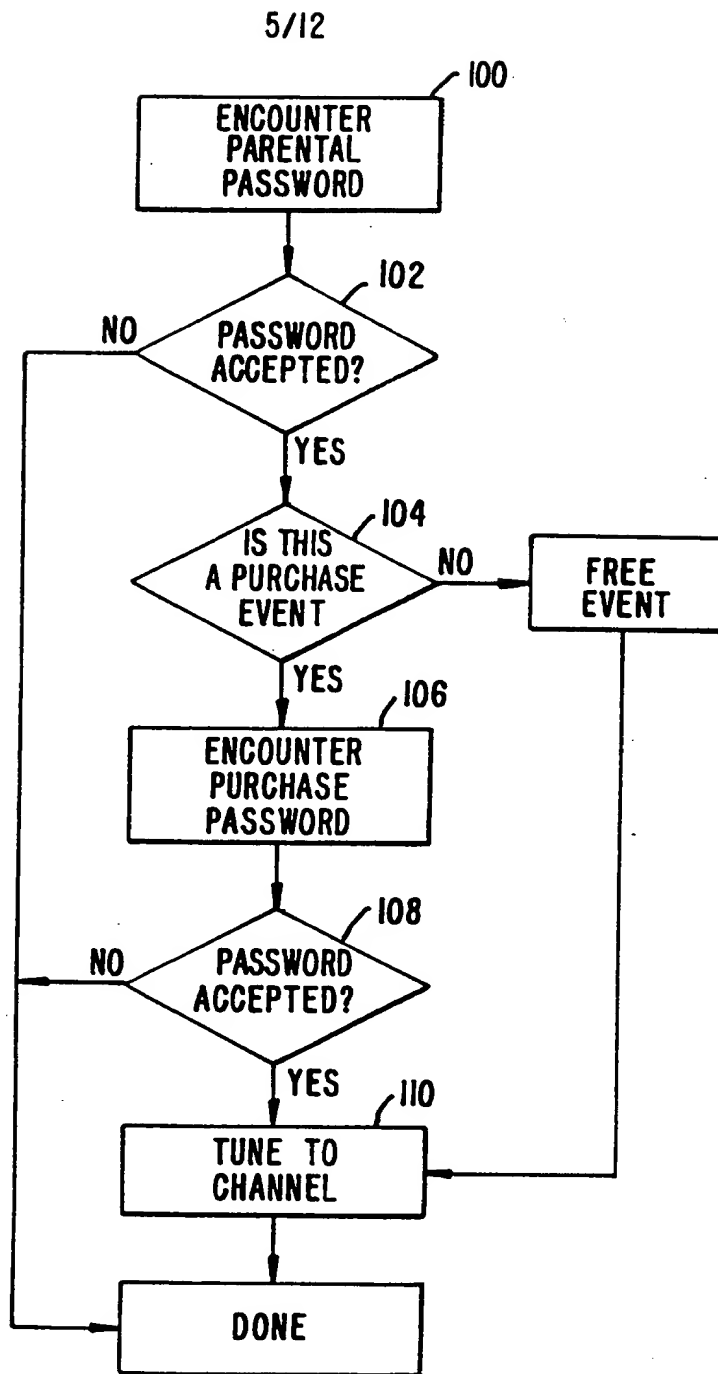


FIG. 3.

008080" 62058960

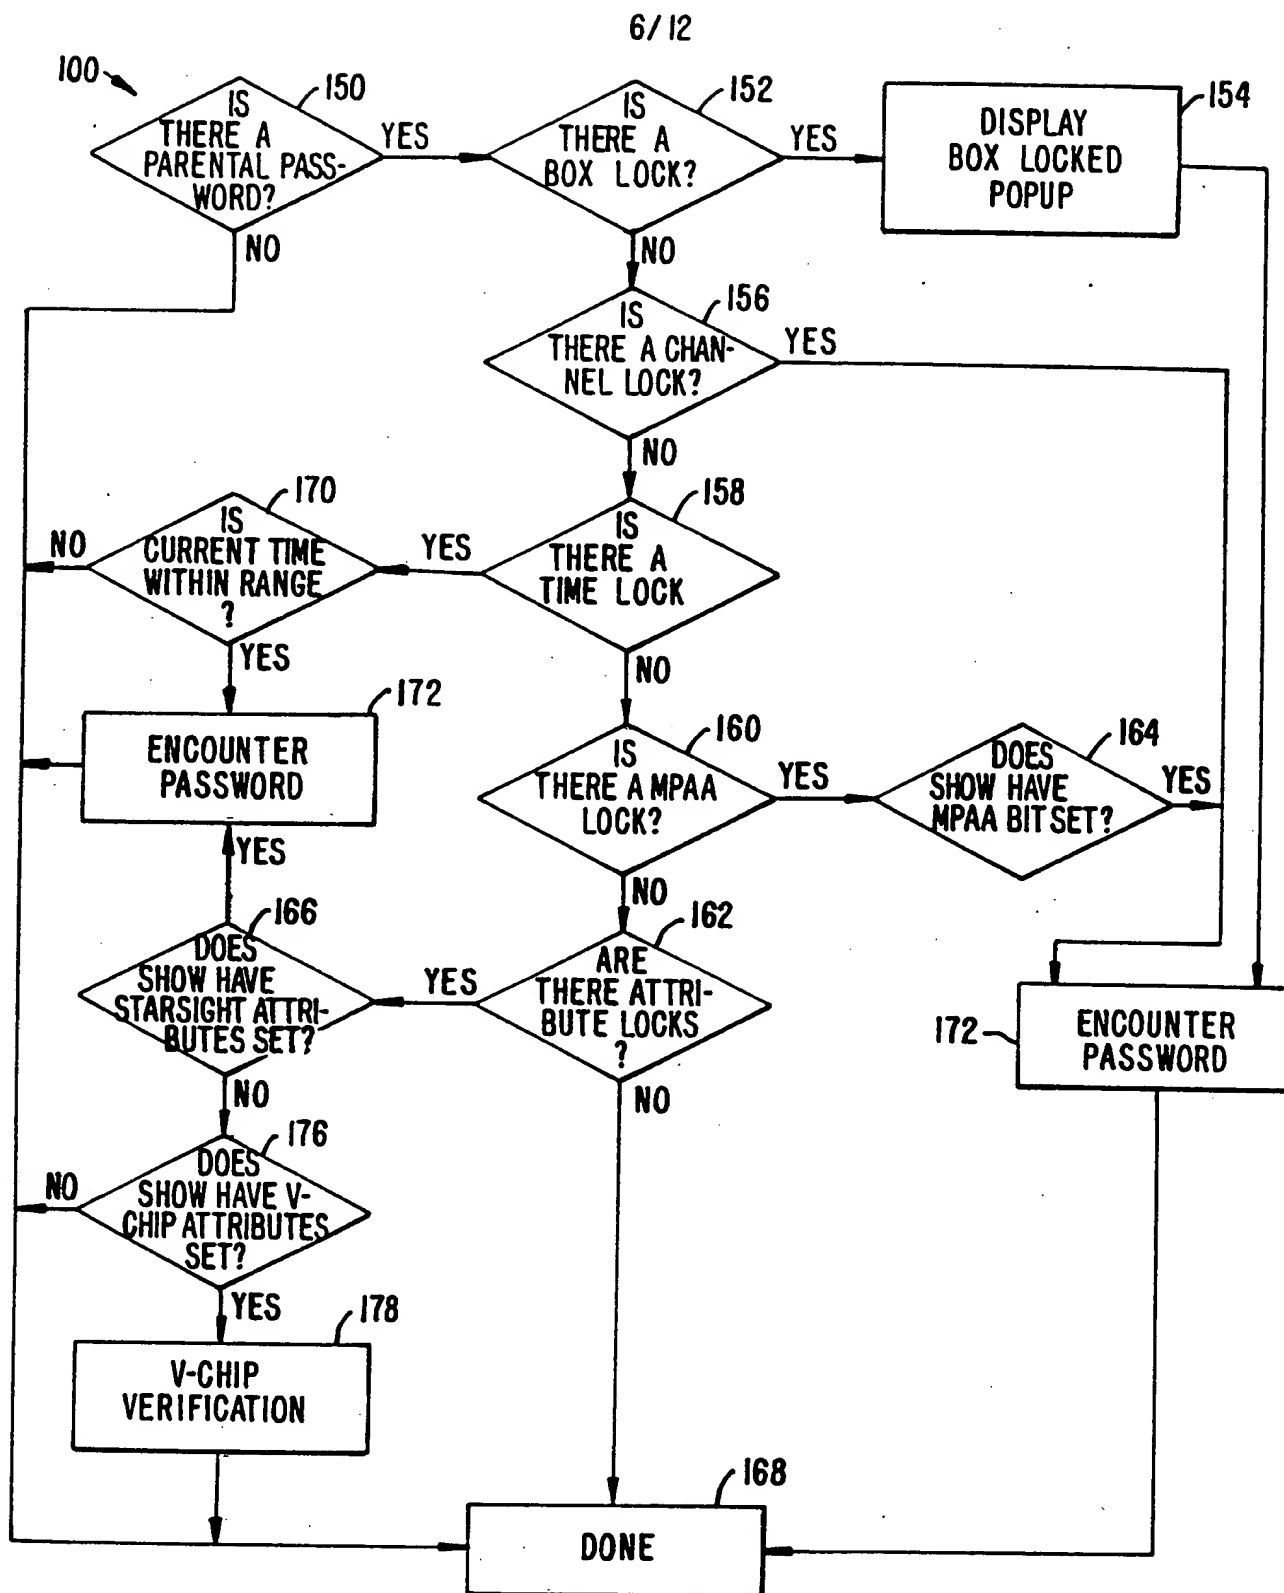


FIG. 4.

106

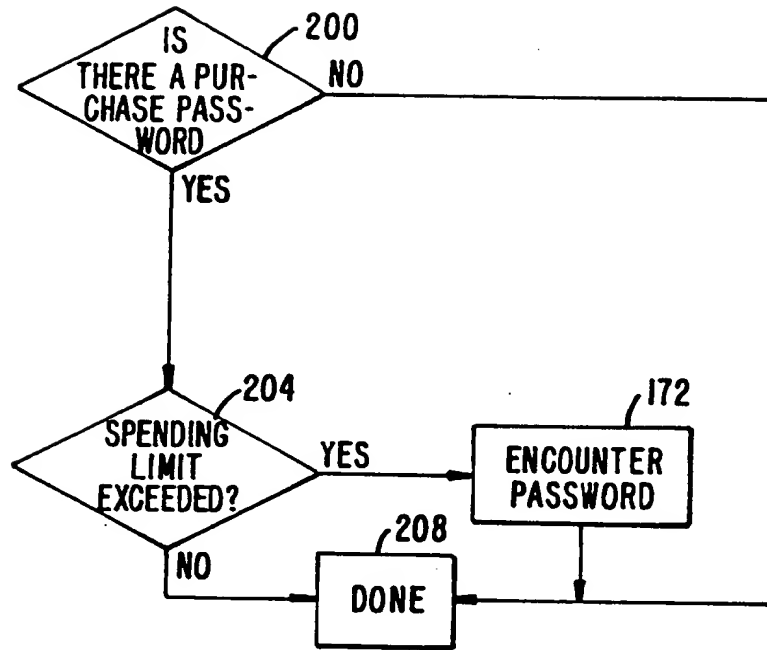


FIG. 5.

008080" 6/05/960

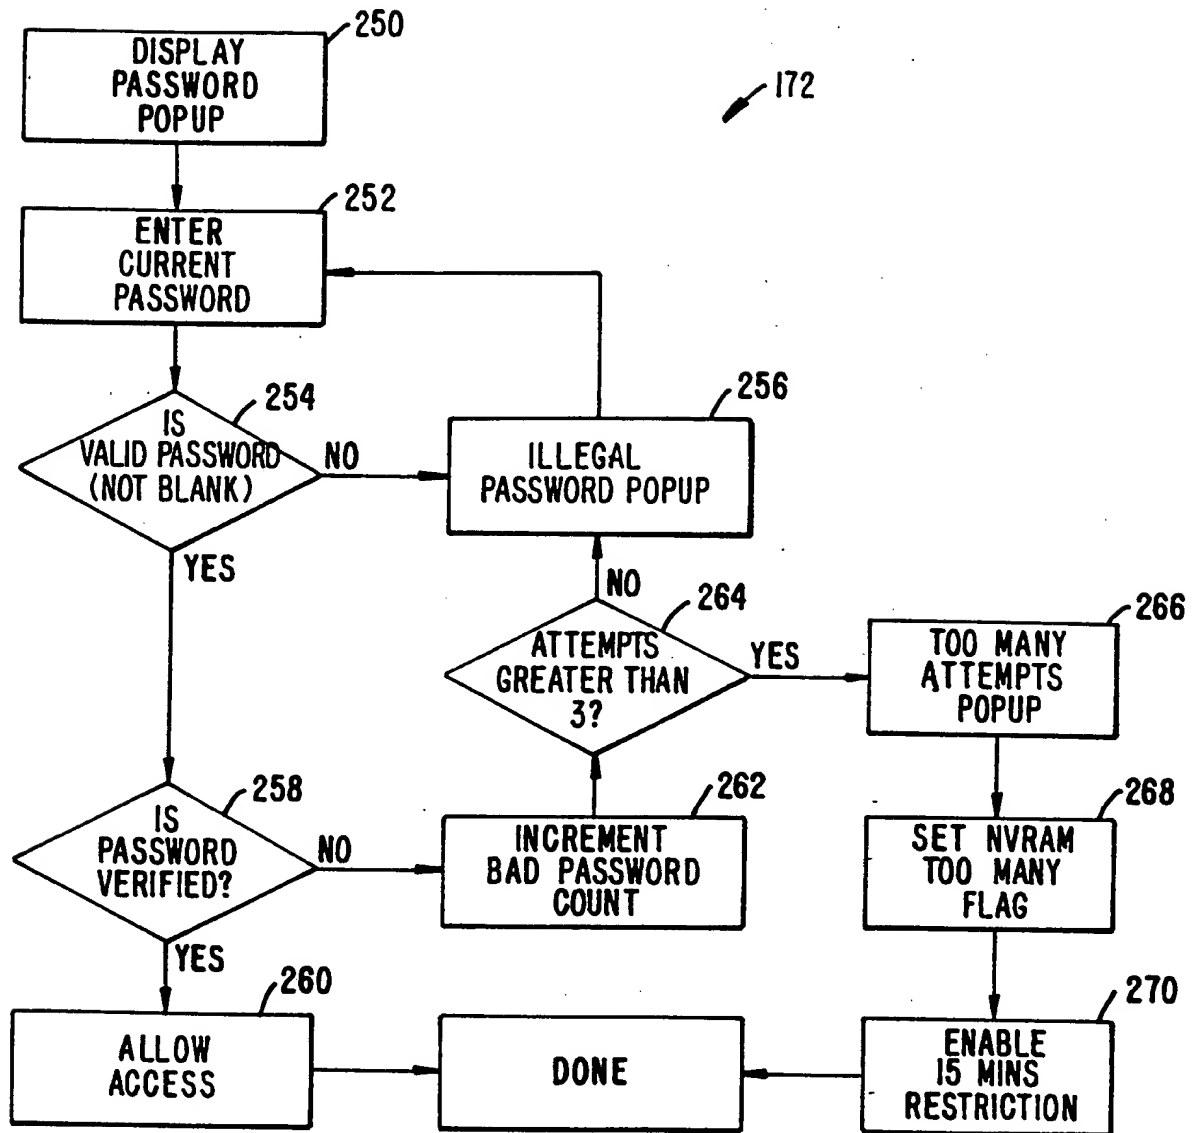


FIG. 6.

008080" 6/05/96

9/12

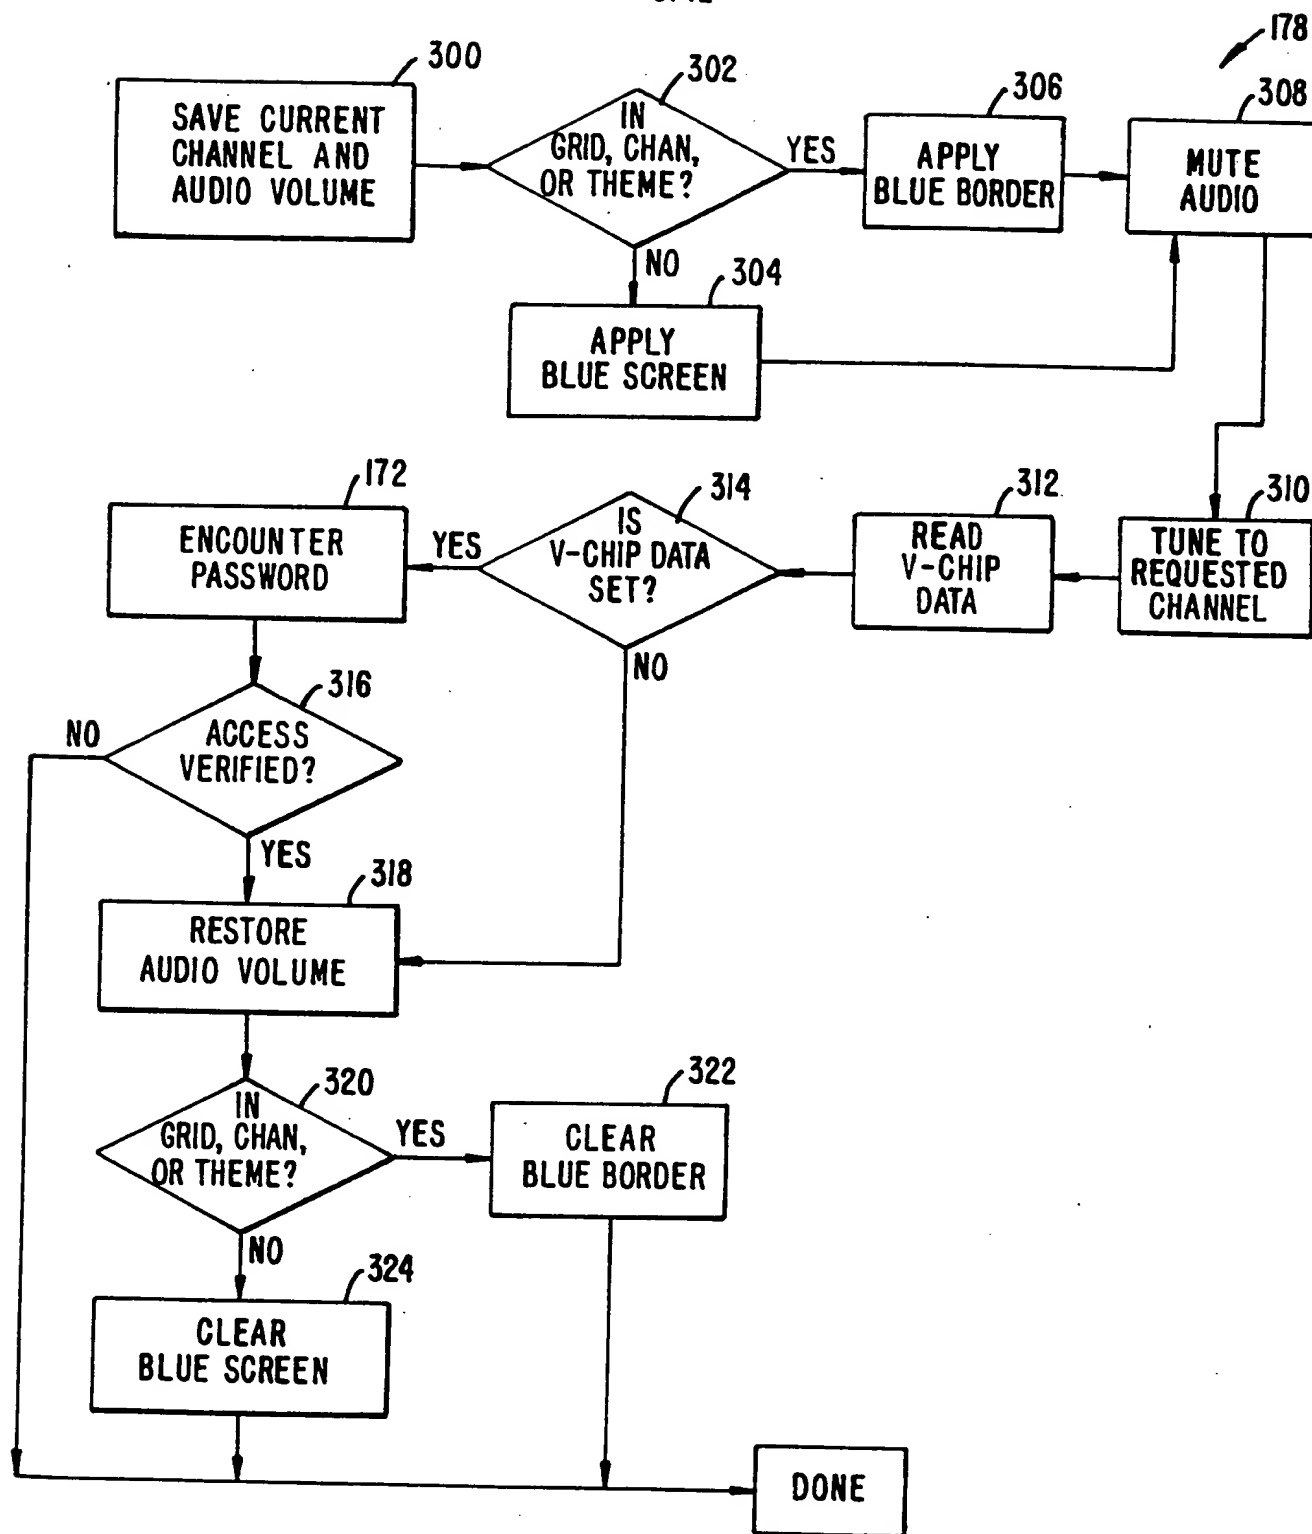


FIG. 7.

00000" 62054960

10/12

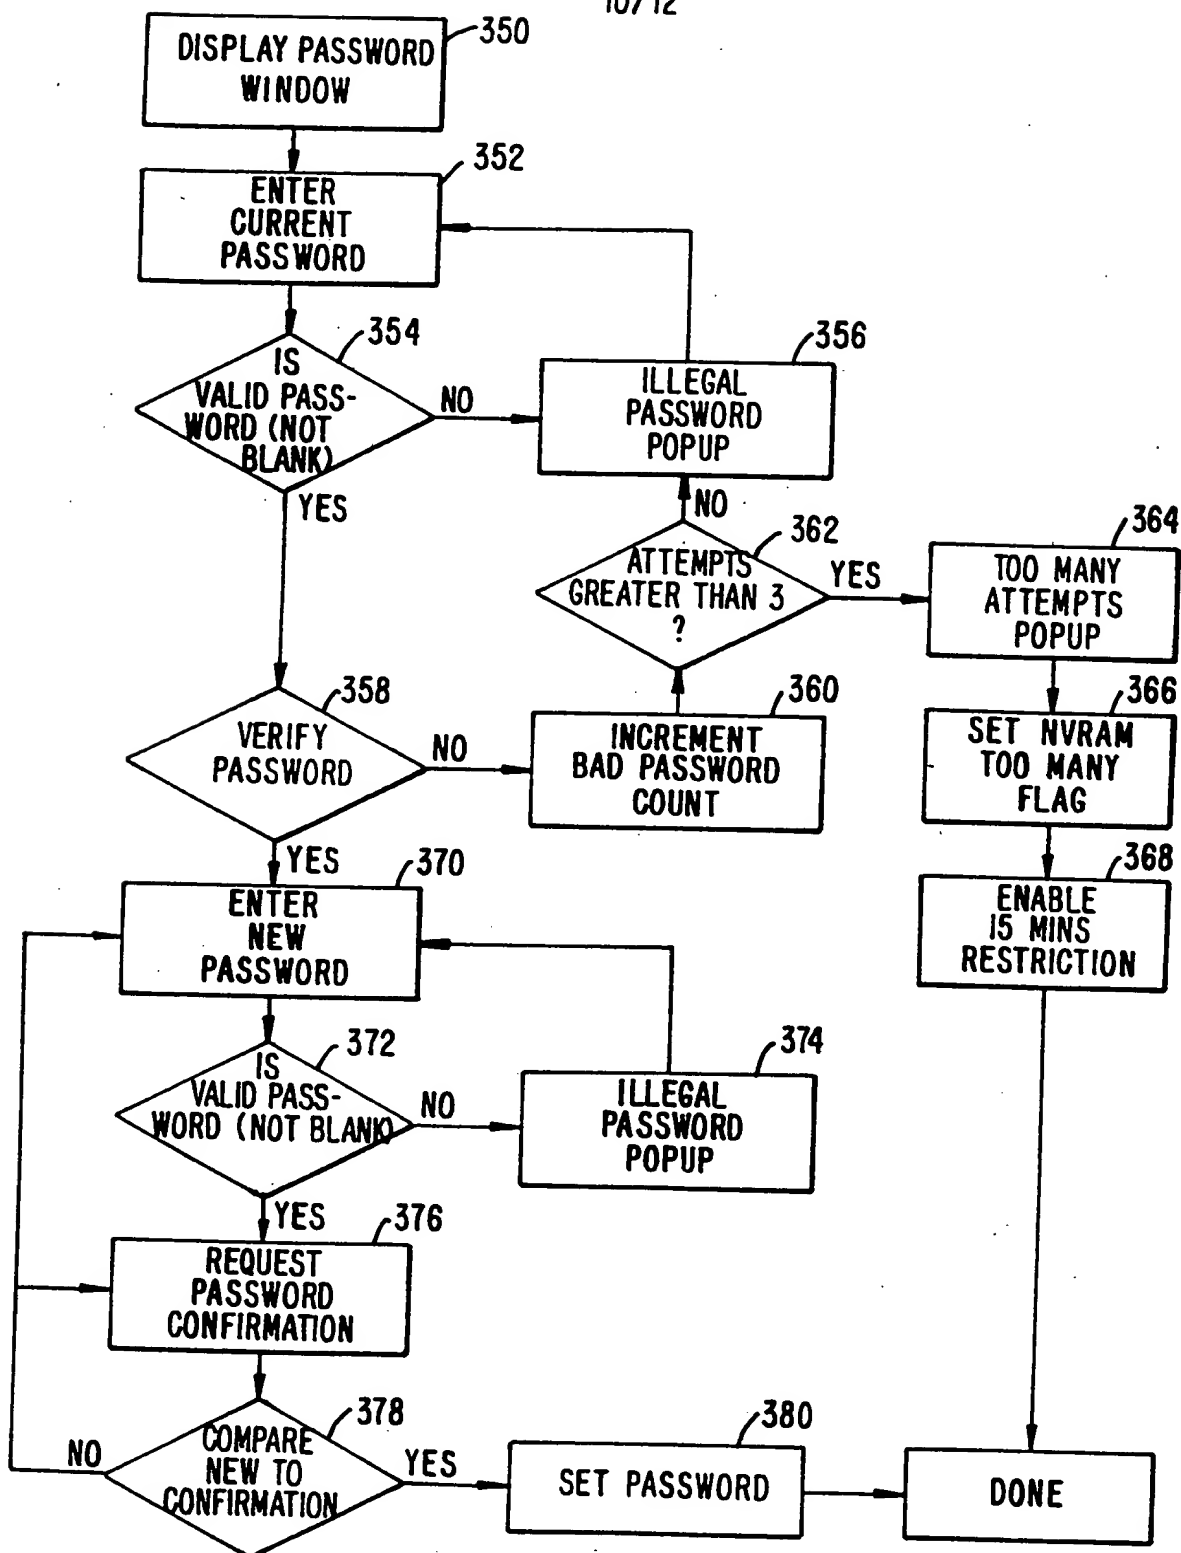


FIG. 8.

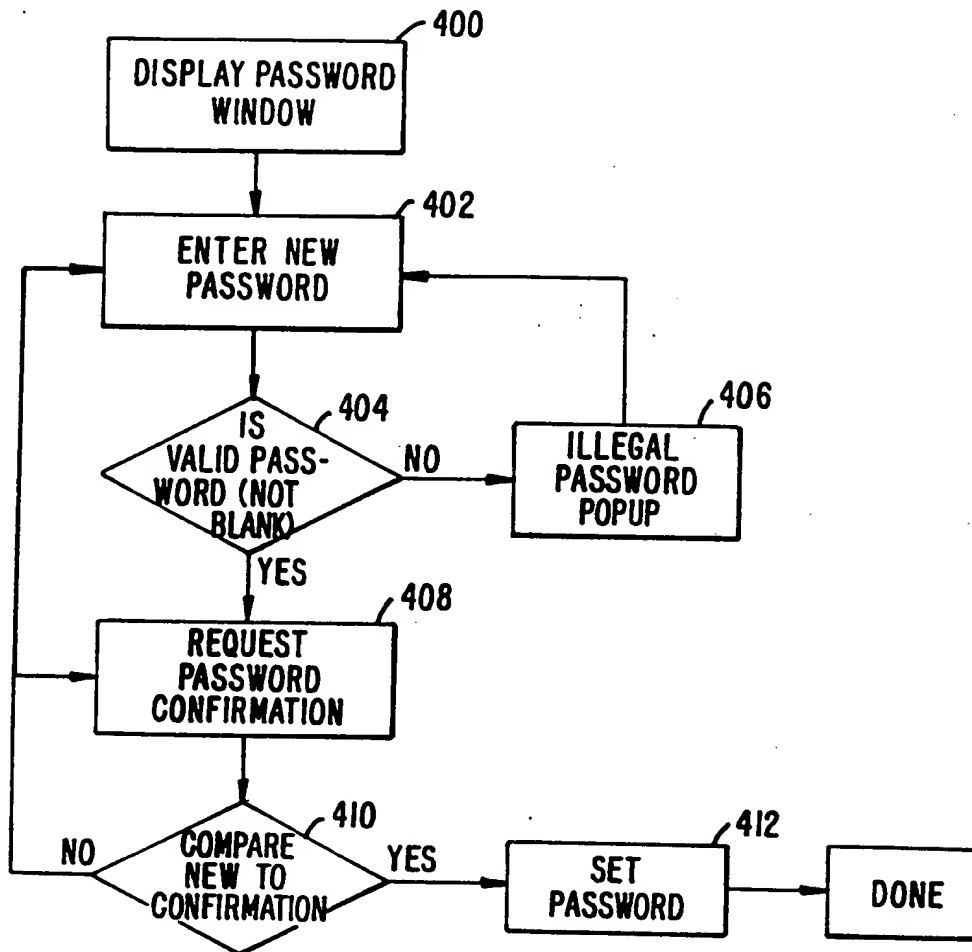


FIG. 9.

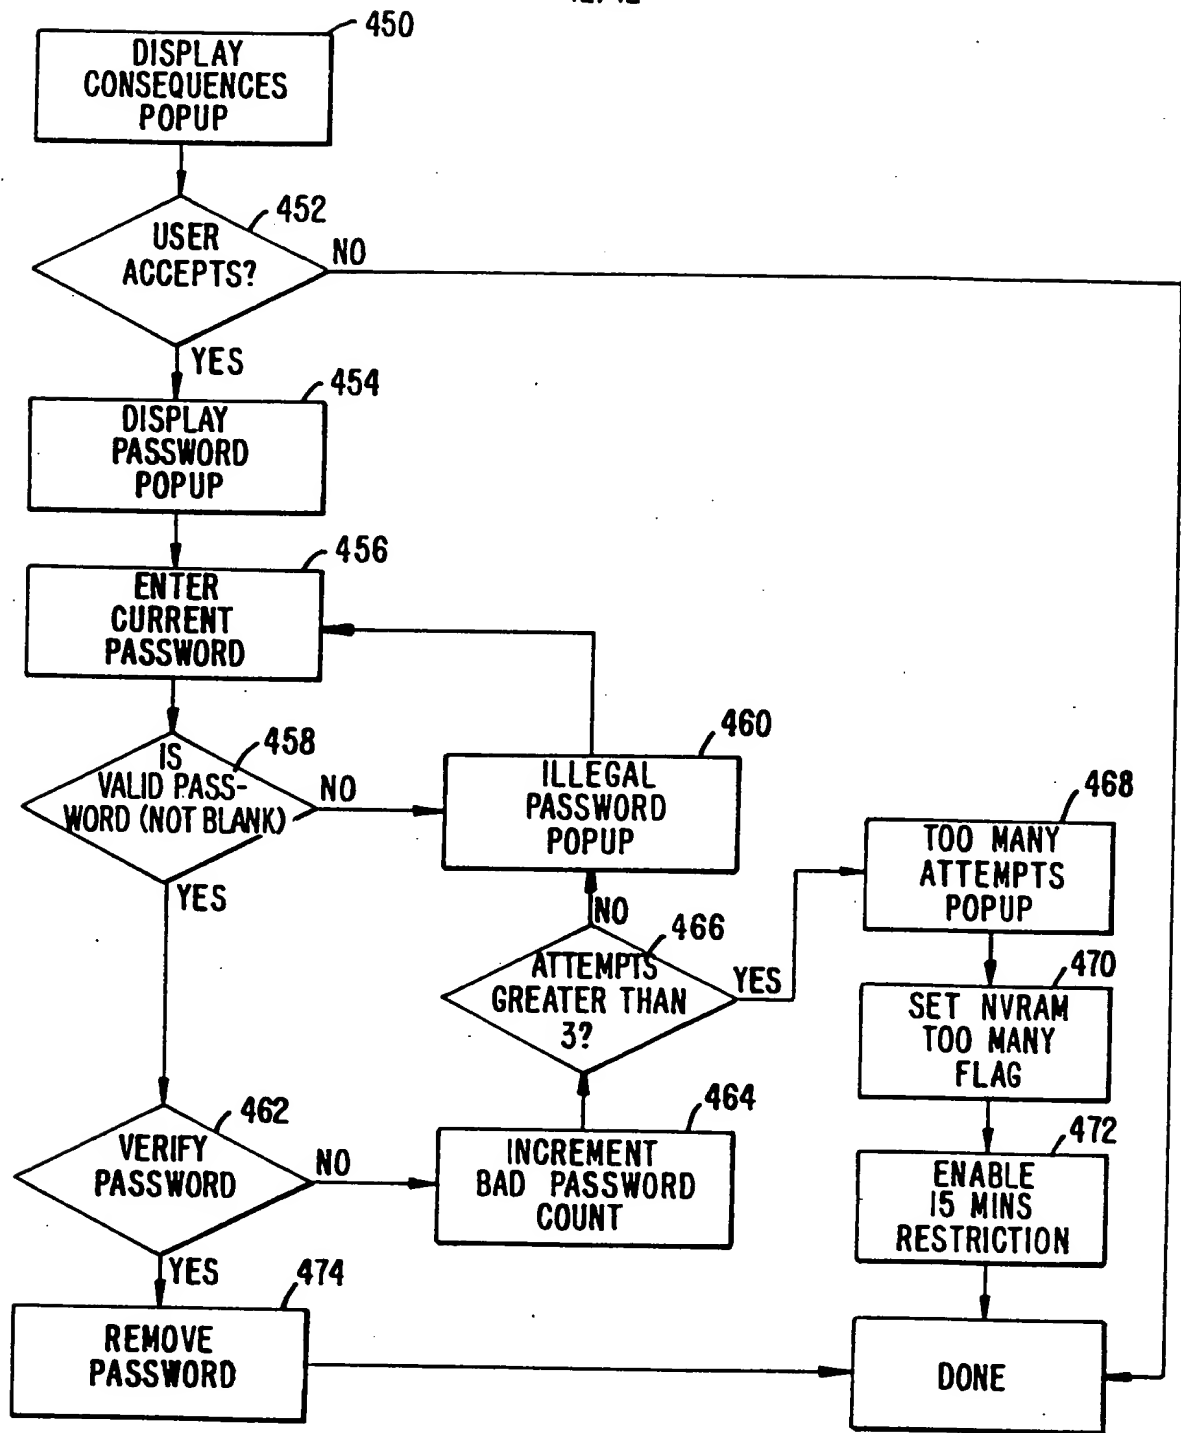


FIG. 10.